

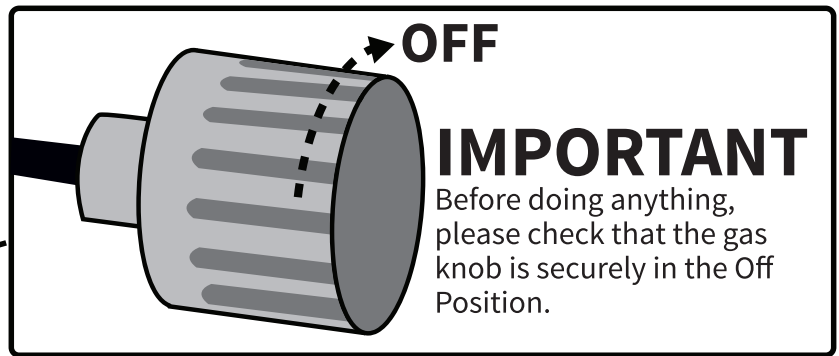


## Safely Operating Your Gas Cooker...

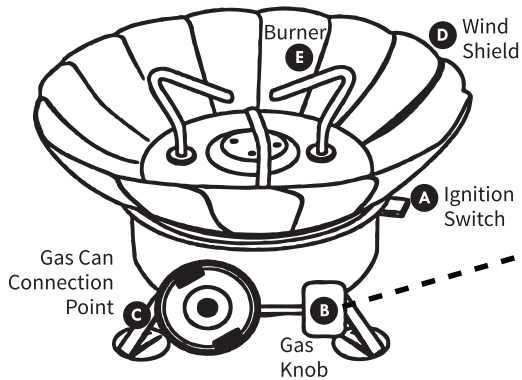

**STEP 1:** Once you are certain that the Gas Knob is off, connect Gas Can to Connection Point (C).

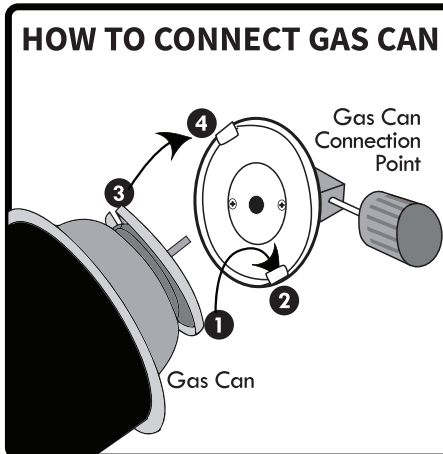

Place rim of can (1) under bottom lip of cooker (2) and tilt forward so that point (3) of can connects with top lip of cooker (4). Turn can clockwise to lock to cooker.



**STEP 2:** Place Pot or Pan on Burner. Do NOT use Cooker inside vehicle.



**STEP 3:** Gently release a small amount of gas by turning gas knob (B) slightly counter-clockwise.



**STEP 4: IMPORTANT!** Keep hands and face well away from Burner (E) when igniting. To ignite, press down on the Ignition Switch (A).



**STEP 5:** Turn off Flame by turning Gas Knob in Clockwise direction until tight. Remove Gas Can while cooker is not in use.



**WARNING**

Keep face, hair and any loose items well away from burner while igniting or when flame is lit. Keep cooker away from children at all times. Failure to follow these precautions may result in serious injury.